



TB


E-LINE TB



• Bridge Cranes



• Monorail Systems

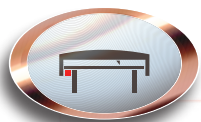


• Textile Cutting and Spreading Tables



• AS/RS Storage Systems



• Moving Ceiling and Door Systems

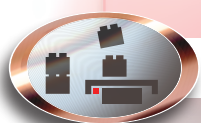

• Assembly and Test Lines

E-LINE TB

Trolley Busbar Systems	2
Order Code System	3
TB PVC Housing	4
TB Feeder Unit	5-6
TB Repair Zone	7
TB Current Collector	8-9
System Components	10-11
Voltage Drop, Calculation Of Feeding Points	12
TB Trolley Busbar Installation Manual	13-14

E-LINE TB

Trolley Busbar Systems

- Bridge Cranes
- Monorail Systems
- Textile Cutting and Spreading Tables
- AS/RS Storage Systems
- Moving Ceiling and Door Systems
- Assembly and Test Lines

It consists of copper conductors and current collectors in the C-PVC body. The uninterrupted energy supply and movement of the system is provided by current collectors connected to the system mechanically.

The eliminates the possibilities such as accident, malfunction in energy distribution with suspended and reel cable in conventional systems. Conductors are enclosed in C-PVC housing and personnel safety is maximized.

There is no fixed connection between the conductor housings and the conductors and between the C-PVC housing and the sliding hangers, the necessary expansion opportunity is provided, therefore the expansion element is unrequired.


Cautions:

If it is used in external environments exposed to rain, it is recommended to protect it with a cover such as a canopy.




E-LINE TB

Order Code System

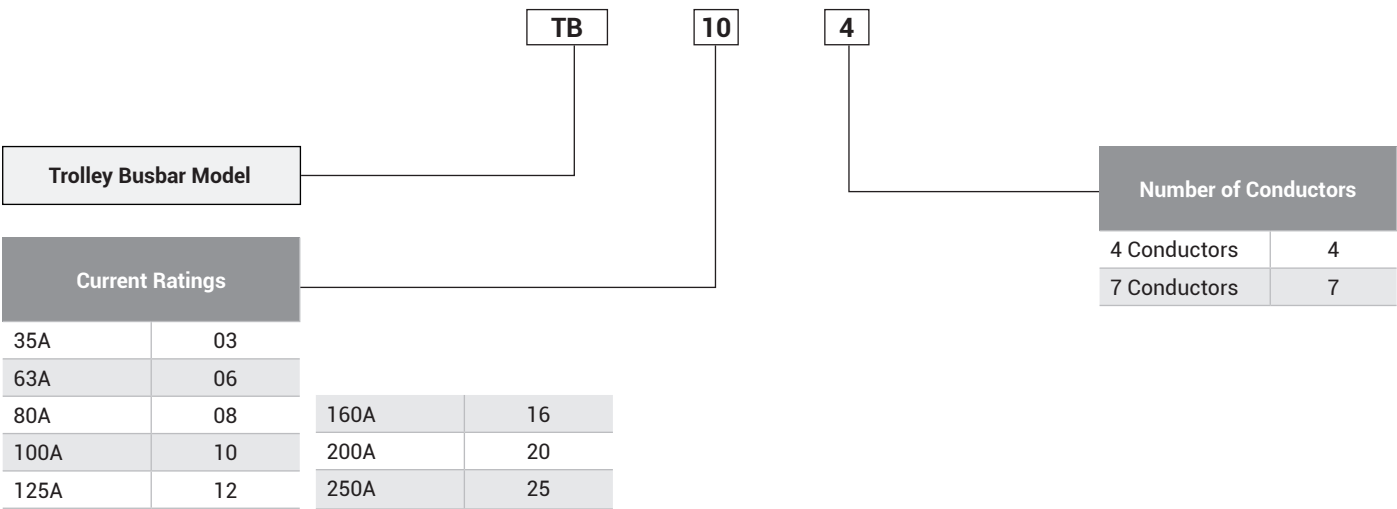


Technical Features

Rated Current	(A)	35	63	80	100	125	160	200	250
Conductor Quantities	(pcs)	4	4	4	4	4	7	7	7
Rated Voltage	(AC) (V)	690	690	690	690	690	690	690	690
Dielectric Properties	(kV/mm)	30	30	30	30	30	30	30	30
Frequency	(Hz)	50/60	50/60	50/60	50/60	50/60	50/60	50/60	50/60
Resistance (20°C)	R20 (mΩ/m)	1,650	1,680	1,380	0,990	0,730	0,870	0,480	0,410
Resistance (35°C)	R35 (mΩ/m)	1,790	1,920	1,600	1,140	0,860	1,080	0,590	0,510
Reactance	X (mΩ/m)	0,220	0,110	0,120	0,190	0,160	0,020	0,100	0,120
Impedance	Z (mΩ/m)	1,803	1,923	1,604	1,156	0,875	1,080	0,598	0,524
Standard Length	(m)	4	4	4	4	4	4	4	4

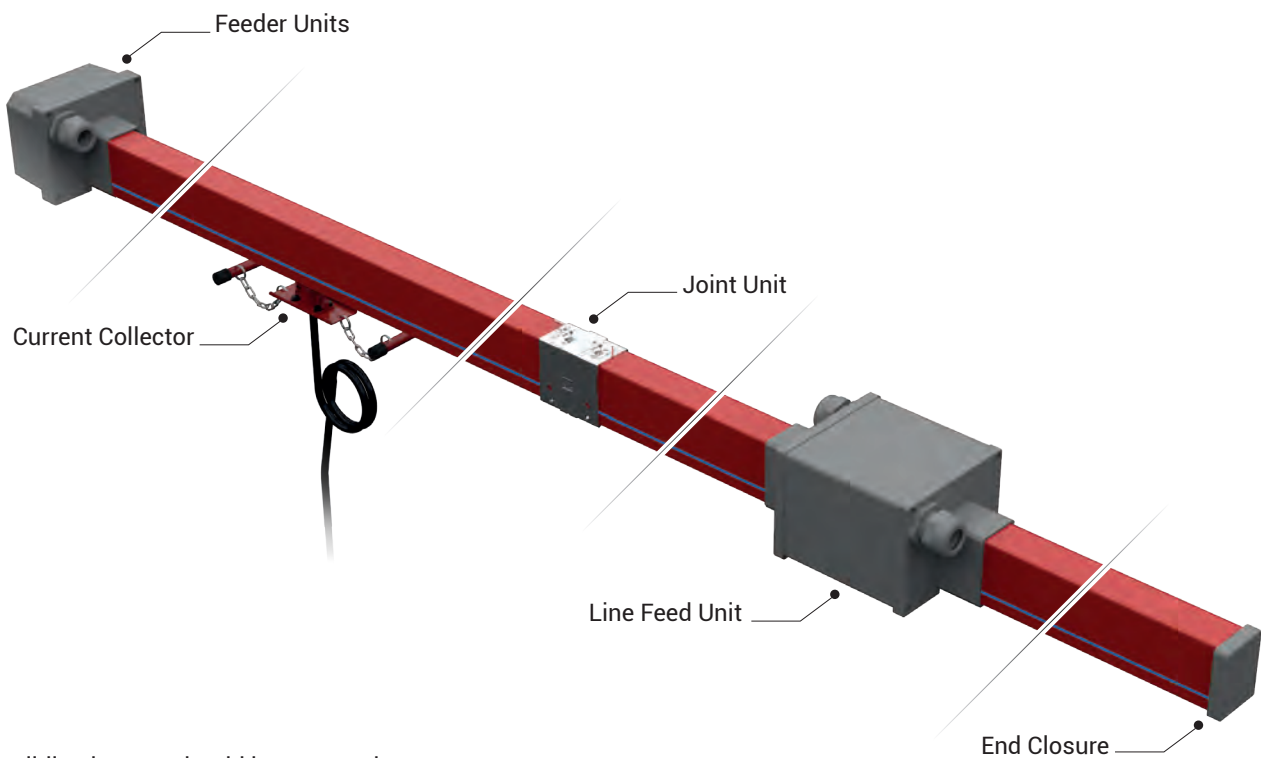

Note: Each sliding hanger should be mounted between 1,30m - 1,50m.

TB Trolley Busbar

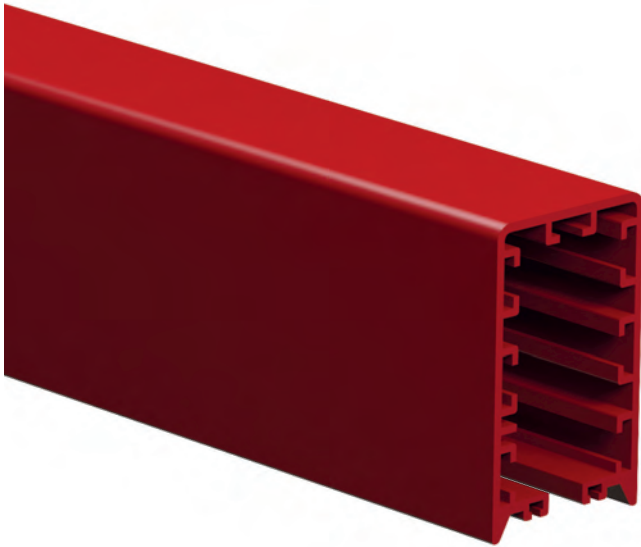

Description	Weight (gr)	Order Code
TB Trolley Busbar Housing	1550	2037292

Multiple current combinations with standard C-PVC housing and different usage types can be created.

The housing has a structure that can use maximum 7 conductors. There is safety system that prevents the current collector to be fixed inversely.

Continuous Copper Conductors

Electrolytic copper conductors can be applied without interruption at a maximum length of 150 m.


- **Number of Conductors:** 4, 7 Conductors
- **Colour:** Red.
- **Temperature range:** -40°C and +55°C.
- **Standard housing length:** 4 meters.
- **Protection:** Standard IP24, Gasket ile IP44.
- **Non-Flammable Characteristics:** UL 94 V0
- Housing is made of C-PVC and plastic accessories are made of PA6 raw material.
- There is a neutral line on the housing the neutral conductor.

Standard 4 Meters

Model	Conductors Quantity-Current (A)	Weight (gr/m)	Conductor Cross Section (mm ²)	Order Code
TB 034	4P- 35A	1900	4x9,45	3025004
TB 064	4P- 63A	1950	4x10,80	3025005
TB 084	4P- 80A	2000	4x13,50	3025006
TB 104	4P-100A	2250	4x19,50	3025007
TB 124	4P-125A	2450	4x26,00	3025008
TB 167	7P-160A	2400	7x13,50	3025009
TB 207	7P-200A	2750	7x19,50	3025010
TB 257	7P-250A	3150	7x26,00	3025011

Joint plastics are not included in the weight values.


Total weight of the joint plastics and bolts is 0,28 kg.

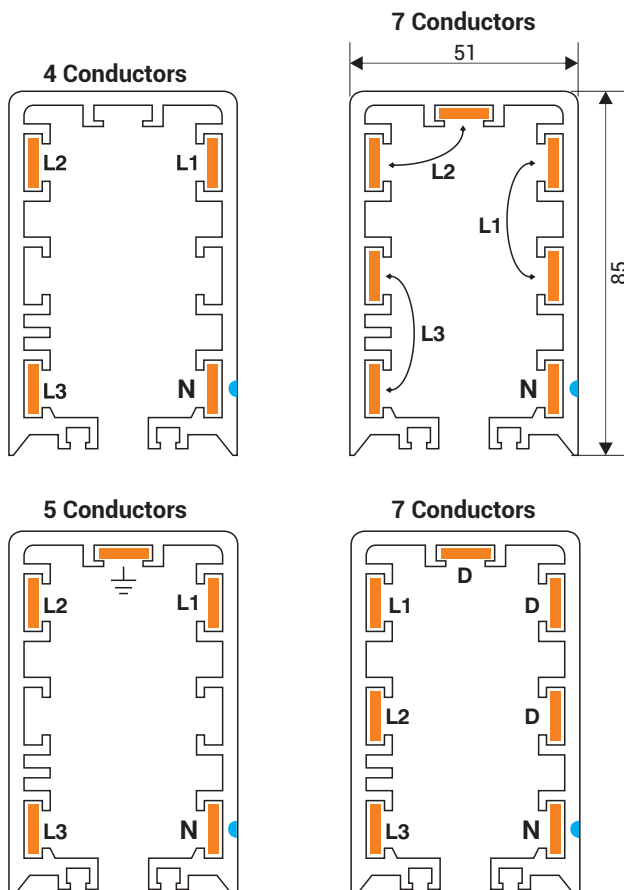



Radius Trolley Busbar

It has minimum 1.5m radius Trolley Busbar available in vertical axes.

- Radius Trolley Lines can be applied with maximum 6 conductors.
- We recommend to use housing pins at joint units of radius trolley lines.

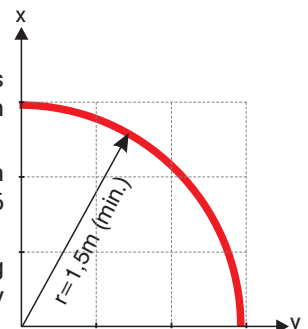


TB Feeder Units

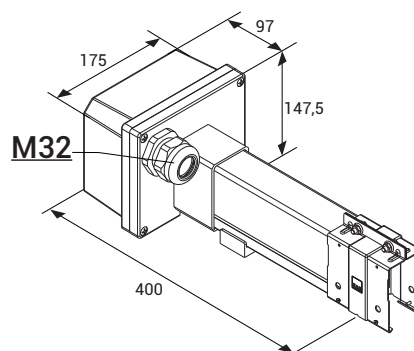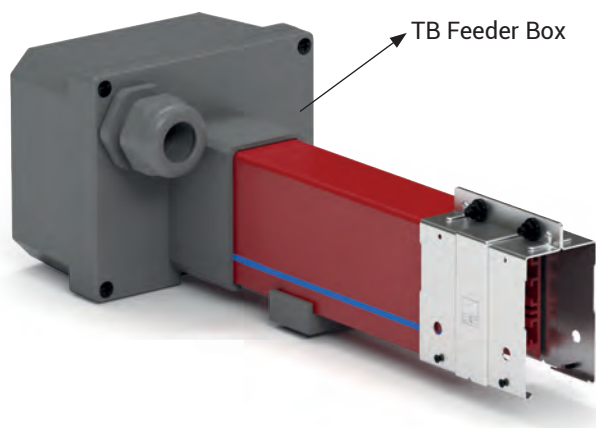

Description	Weight (gr)	Order Code
TB Feeder Units	1100	3025149
TB Feeder Box	650	3188028


Type of the feeder box is selected by calculating the voltage drop and the location of the power supply that shall provide power to the system.

TB Joint Unit

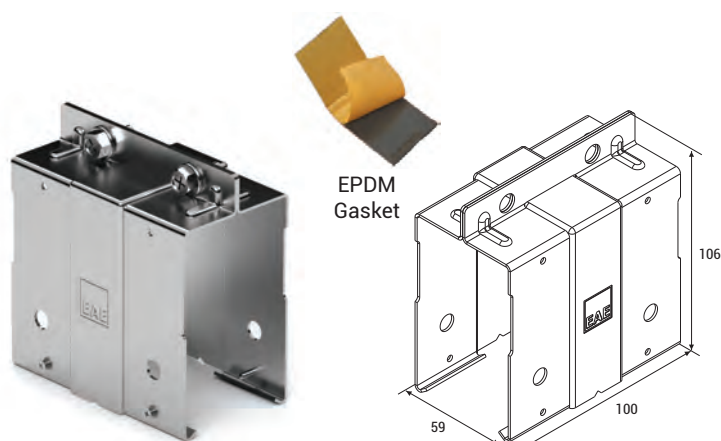

Description	Weight (gr)	Order Code
TB Joint Unit	270	1004256


TB Housing Pin

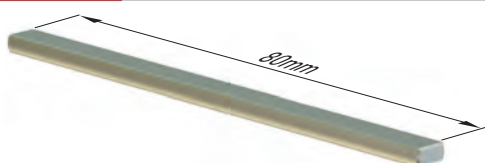

• Two pieces should be used with each joint unit

Description	Weight (gr)	Order Code
TB Housing Pin	8	1001025


TB End Closure

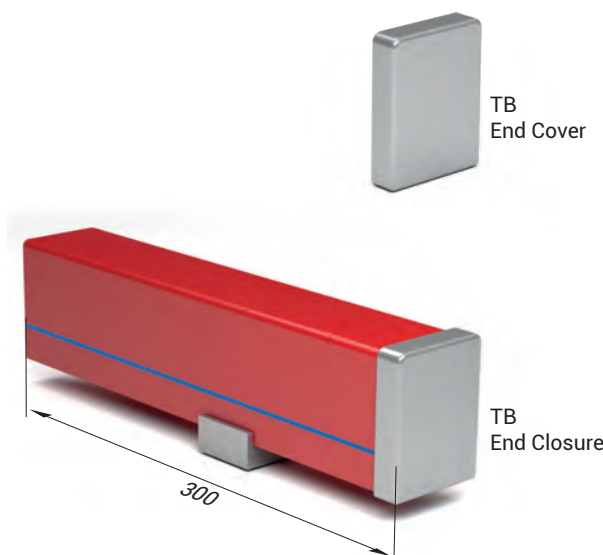

Description	Weight (gr)	Order Code
TB End Closure	550	3025147
TB End Cover	20	1001036

The end closure placed on the end of the busbar line prevents the exposure of the conductors, protects the system, and prevents the current collector from moving out of the housing.


TB Line Feed Units - Continuous Type

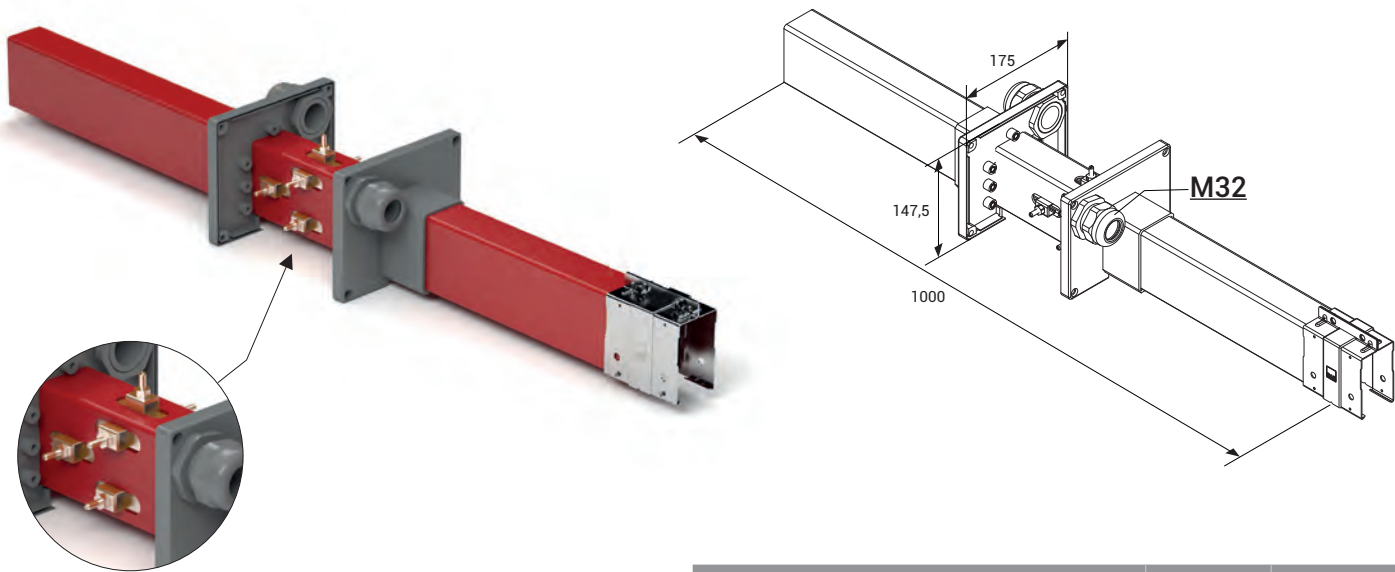

Description	Weight (gr)	Order Code
TB Line Feed Unit - Continuous Type	2750	3025148

Type of the feeding element is selected by calculating the voltage drop and the location of the power supply that shall provide power to the system.


TB Line Feed Units - Jointed Type

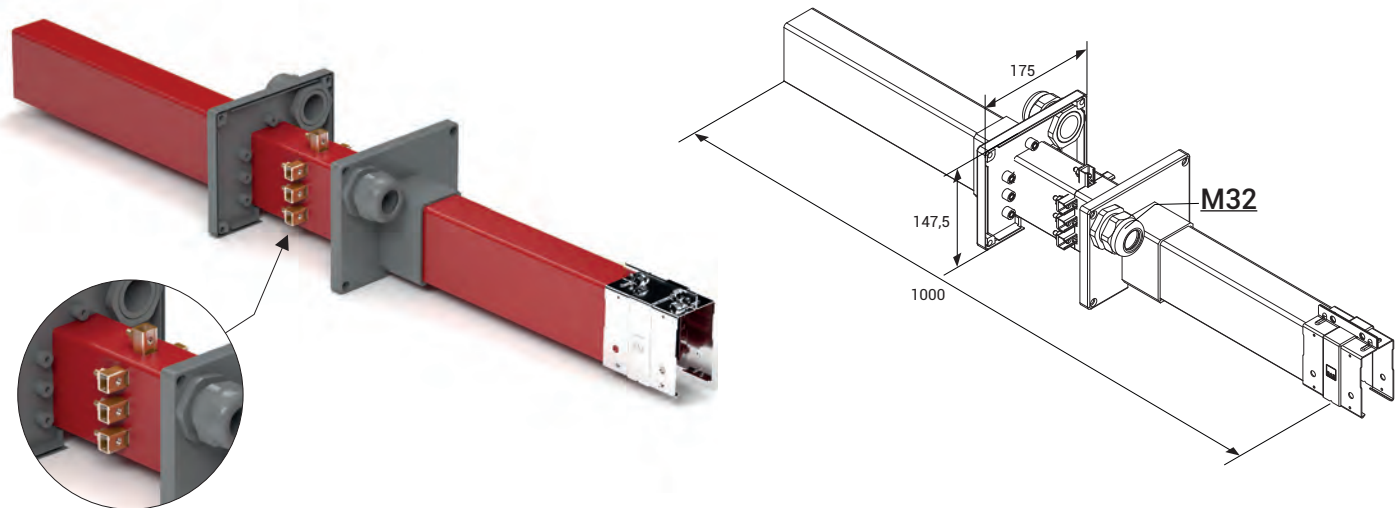

Description	Weight (gr)	Order Code
TB Line Feed Unit - Jointed Type	2850	3025150

Type of the feeding element is selected by calculating the voltage drop and the location of the power supply that shall provide power to the system.


TB Repair Zone Unit

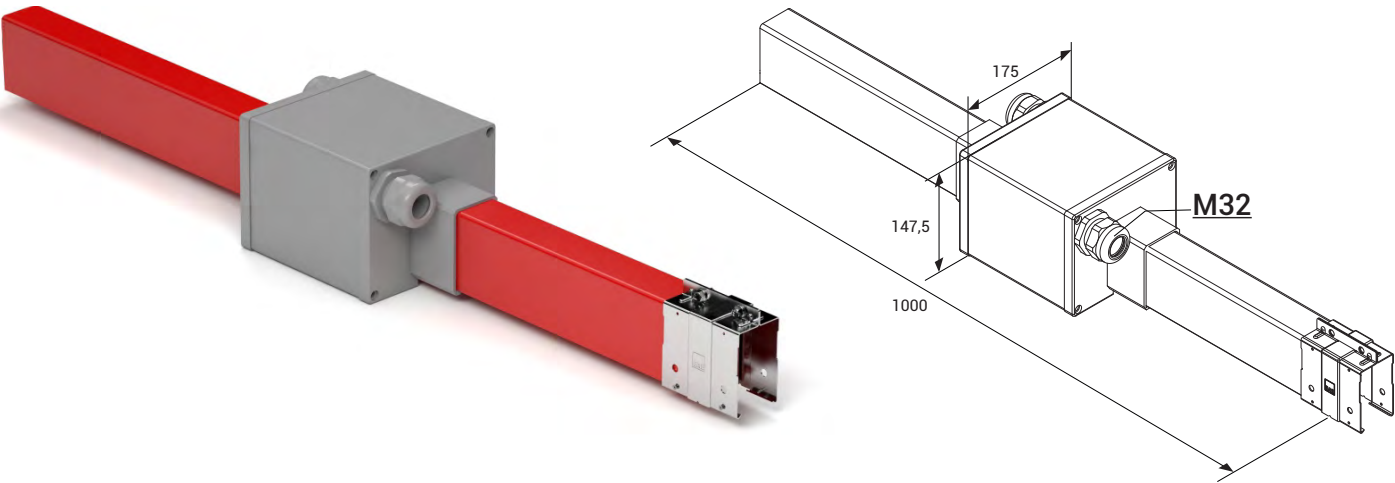

Description	Weight (gr)	Order Code
TB Repair Zone Module	2700	3025003

Current supply shall be cut off when a machine working on the line shall be maintained or repaired. Repair zone module is used to create a currentless area on the busbar so that the other machines operating on the same line may continue to work.


TB Current Collector Replacement Module

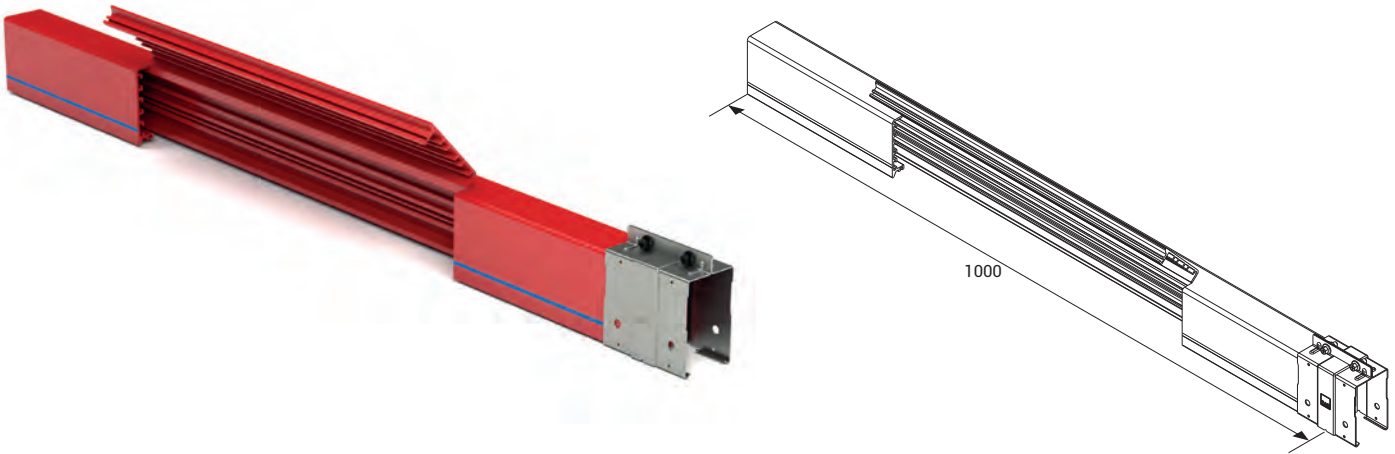




Description	Weight (gr)	Order Code
TB Current Collector Replacement Module	2250	3024593

This unit is used to remove an existing current collector or to add extra trolleys. The unit is obtained by cutting a 50cm section from the PVC housing.

TB Current Collectors With Cable (4P/7P)

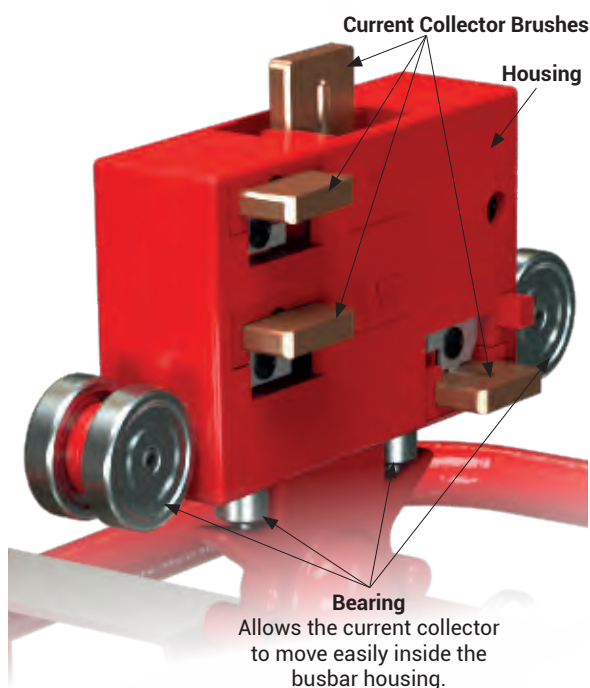



Model	Brushes Number-Current (A)	Weight (gr)	Order Code
TB	4P - 35A (Single)	1750	3025145
	4P - 70A (Double)	2900	3024947
	4P - 105A (Triple)	3950	3024945
	7P - 35A/70A (Single)	2200	3025144
	7P - 70A/140A (Double)	3900	3024946
	7P - 105A/210A (Triple)	5650	3024944

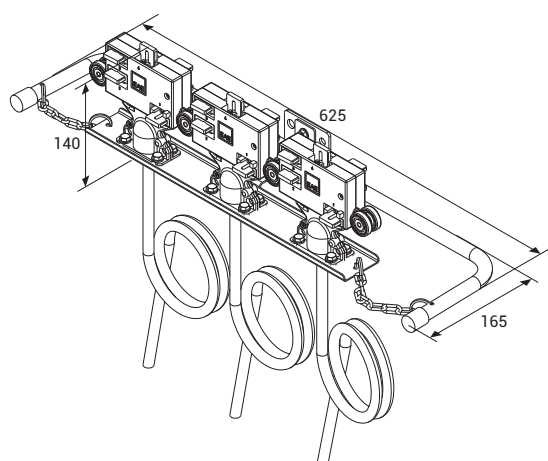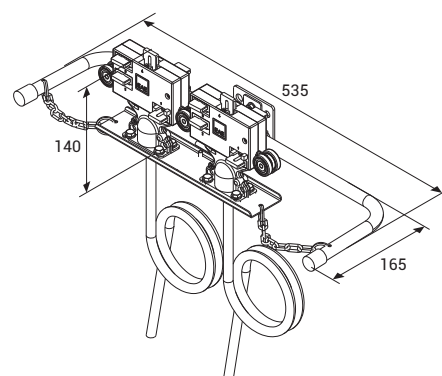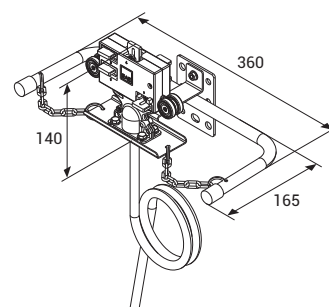

Current collector are the moving elements of the trolley busbar systems. Current collector brushes rub against the conductors and draw continuous current while they move through the busbar line. They adapt to shaky and vibrant conditions thanks to the moving brushes. As current collecting and transfer systems are included in the C-PVC housing, they are protected against human contact.

TB Current collector models operating speed is max. 100m/min.



TB Current Collector With Wheel Brushes (4P)

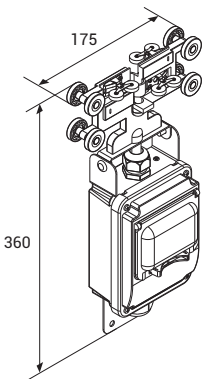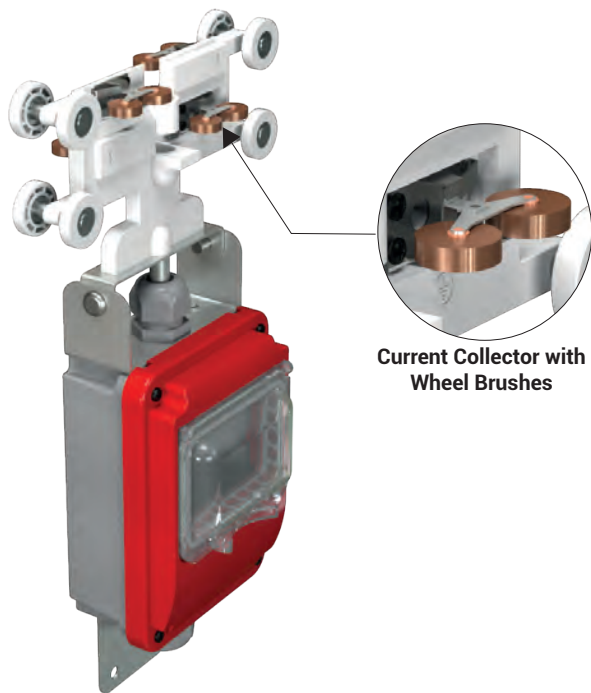

Model	Brushes Number-Current (A)	Weight (gr)	Order Code
TB	4P - 16A	900	3024774

Current collector with Wheel Brush simplify the movement of the current collectors inside the busbar by reducing the time at the tables when movement is provided by the personnel.


TB Current Collectors With Fuse Box (5P)

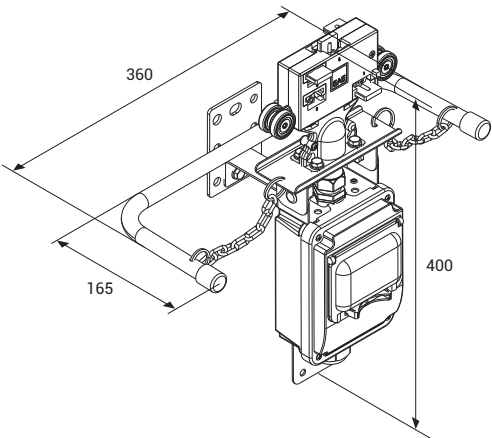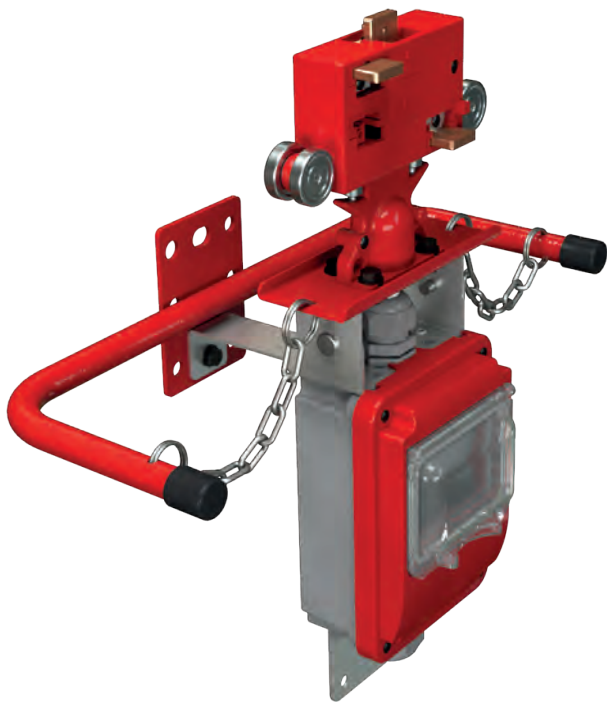

Model	Brushes Number-Current (A)	Weight (gr)	Order Code
TB	5P - 35A	1850	3024403


Fuse boxed with both staff and current receiving area carts current machine's safety can be raised to a higher level. In addition, when it is desired to cut the power of one of the machines on a line, the current is cut off through the fuse, other machines on the line can continue to operate.

TB Plastic Sliding Hanger

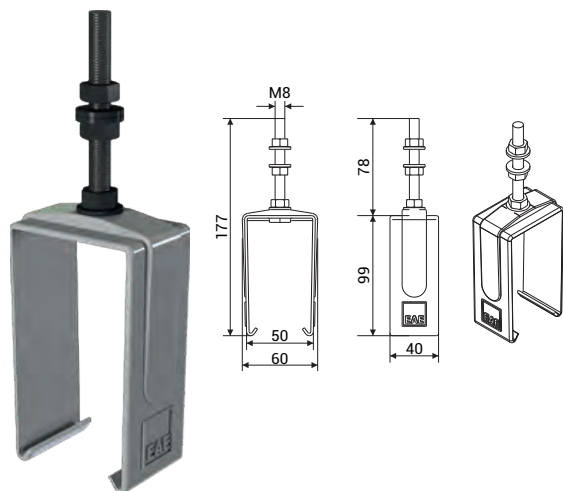

Description	Weight (gr)	Order Code
TB Plastic Sliding Hanger	85	1004257


TB Steel Sliding Hanger

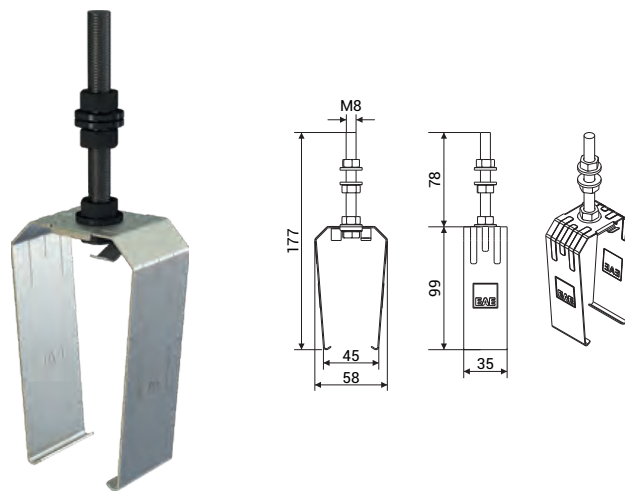


Description	Weight (gr)	Order Code
TB Steel Sliding Hanger	100	1006055

Trolley busbar should be mounted with sliding hangers and each hangers should be between 1,30m - 1,50m. Distance between sliding hanger and other units (joint unit, feeder etc.) should be minimum 300mm.

TB Hanger Bracket

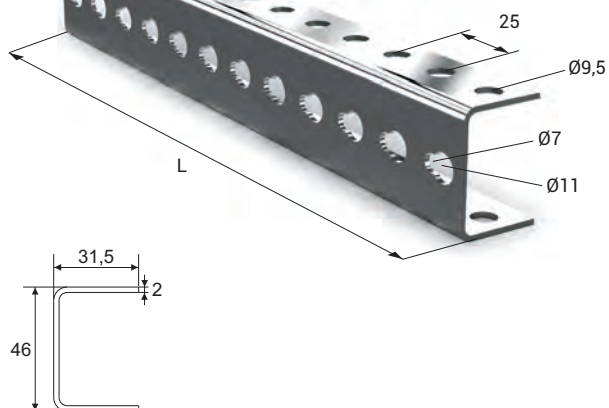

Description	L (mm)	Weight (gr)	Order Code
TB Hanger Bracket	250	350	3025153
URC-C/S Hanger Bracket	500	700	3034560
URC-A Hanger Bracket	750	1050	3025382

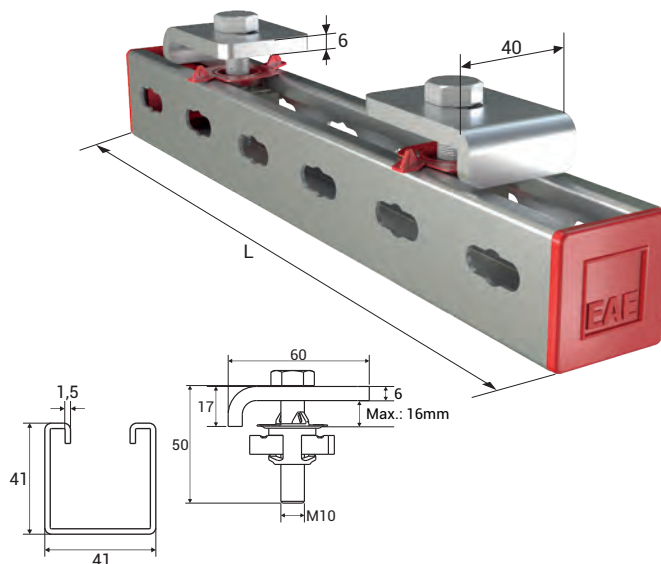

Description	L (mm)	Weight (gr)	Order Code
TB BR Hanger Bracket Set	300	800	3178916
URC-C/S BR Hanger Bracket Set	600	1250	3178917
URC-A BR Hanger Bracket Set	800	1550	3178918

E-LINE TB

TB Current Collector Brushes



Description	Weight (gr)	Order Code
TB Current Collector Phase Brush	20	2011161

TB Copper Conductors



Description	Order Code
TB 0,80x13,50 (TB Copper)	1004261
TB 1,00x13,50 (TB Copper - 80A)	1004260
TB 1,50x13,00 (TB Copper - 100A)	1004258
TB 2,00x13,00 (TB Copper - 125A)	1004259

TB Conductor Cassette



Conductor cassette shall be used to prevent damage to the conductors while the copper conductors are installed on the busbar.


Description	Weight (gr)	Order Code
TB Conductor Cassette	6800	3025151

TB Conductor Mounting Tool



Description	Weight (gr)	Order Code
TB Conductor Mounting Tool	250	3025143

TB Gasket

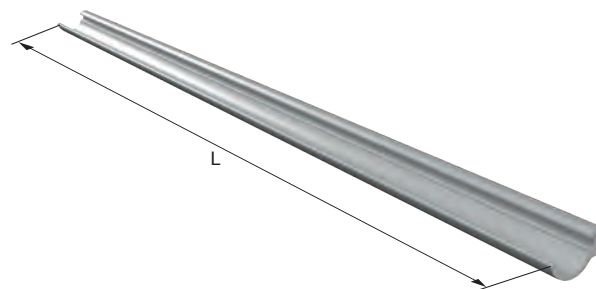

• Continuous length is maximum 300 meters.

• Gasket should be ordered twice the line length.

Description	Weight (gr)	Order Code
TB Gasket Roll (m)	30	1037761

Description	L (mm)	Weight (gr)	Order Code
TB Gasket Straight Length (Pcs.)	4000	120	1037762

Voltage Drop

The voltage drop in the busbar lines shall be inspected as per the busbar type selected according to the total current calculated based on the ambient temperature and operating period of the system. Maximum acceptable value for voltage drop is 3%.

For Direct Current

$$\Delta U = 2 \cdot L_t \cdot I_G \cdot R$$

ΔU = Voltage Drop [V]

For Mono-Phase Alternative Current

$$\Delta U = 2 \cdot L_t \cdot I_G \cdot Z$$

I_G = Total current [A]

R = Resistance of the busbar [Ω /m]

For Three-Phase Alternative Current

$$\Delta U = \sqrt{3} \cdot L_t \cdot I_G \cdot Z$$

Z = Impedance of the busbar [Ω /m]

L_t = Calculated Hole Length [m]

Note : Calculation of the current drawn during first start in various motor types;

I_A = Total current drawn in the first start of the motors [A]

For the starting current; Three-phase asynchronous drive in direct start

Slip ring rotor motor

Frequency converter

I_A = I_G x calculated as 5 to 6

I_A = I_G x calculated as 2 to 3


I_A = I_G x 1,20 to 1,50 calculated between.

Calculation Of Feeding Points

When we take L_t as the length of the line, feeding points may be selected as shown in the diagrams below to keep the L voltage drop at minimum and it may be used as the hole length for the calculation of L_t voltage drop.



1 feeding point from the start, $L_t = L$

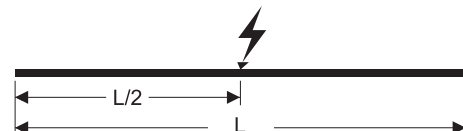


1 feeding point from the center, $L_t = L/2$




2 feeding points from the start points, $L_t = L/4$



2 feeding points, $L_t = L/6$

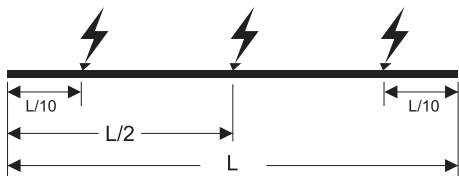

3 feeding points, $L_t = L/10$

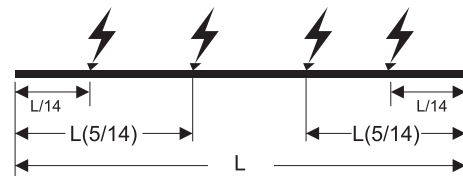

4 feeding points, $L_t = L/14$


E-LINE TB

Installation Manual


TB - Installation Of Joint Unit



1
The joint point is covered using a self adhesive EPDM gasket.

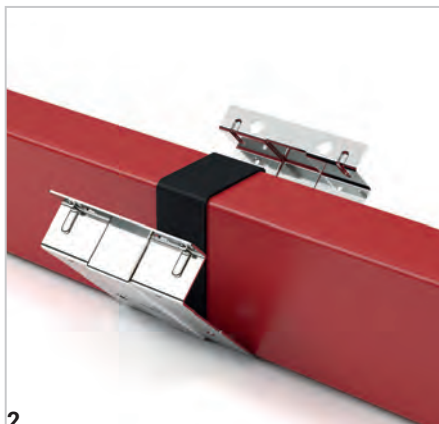


2
Engage the joint unit to the bottom of the busbar and close it.

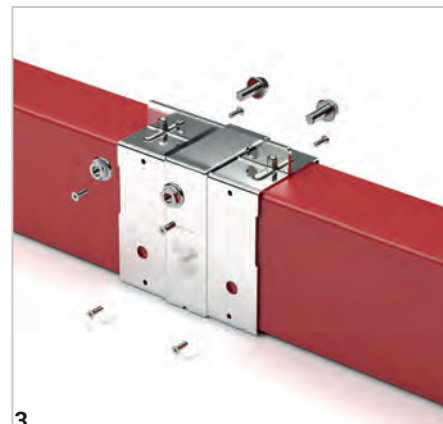


3
Secure it to the housing with screws.


TB - Feeder Unit

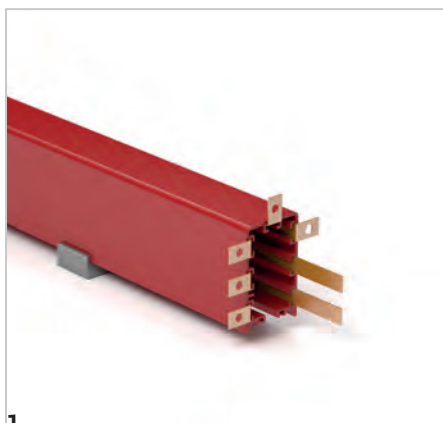

1
Conductors are bend 90° and pushed into the housing.

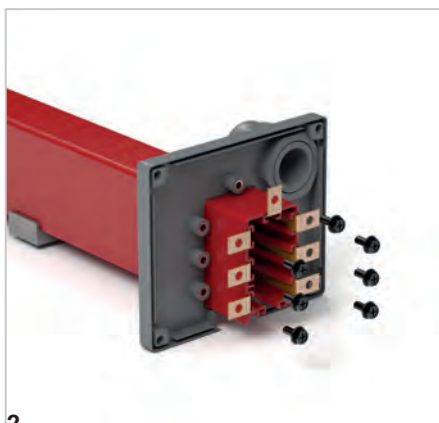


2
Screw the conductors to the feeding module. Connect the feeding cables by putting them through the cable gland.

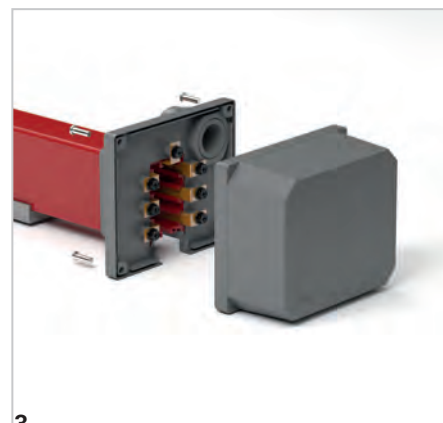


3
Close the module cover and screw it.


TB - Line Feed Unit - 2 (Jointed Type)

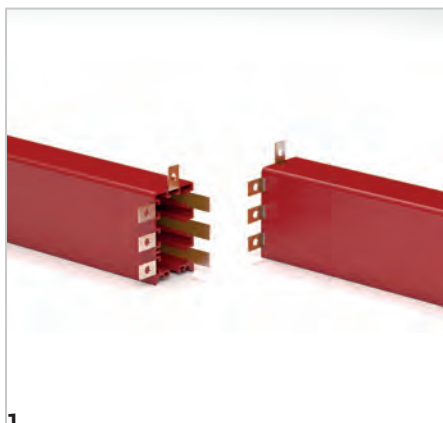

1
Conductors are bend 90° and pushed into the housing.

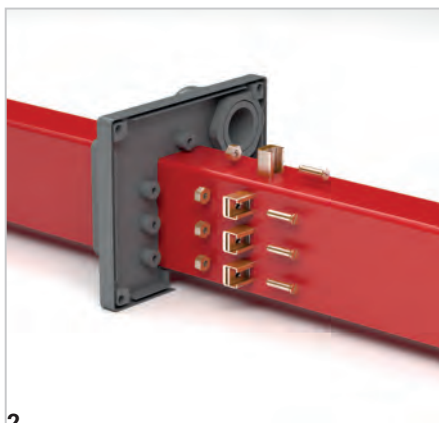

2
Put conductors back-to-back and join them with clips. Connect the feeding cables to the clips.

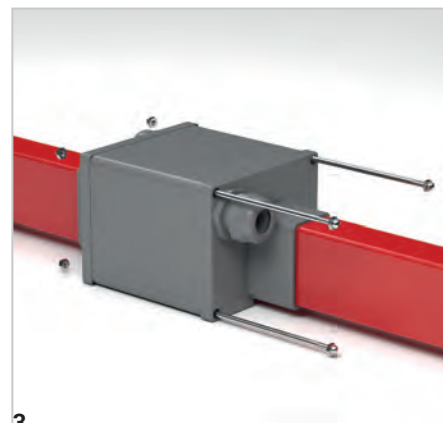


3
Close the module cover and screw it.


E-LINE TB

Installation Manual


TB - Line Feed Unit - 1 (Continuous Type)

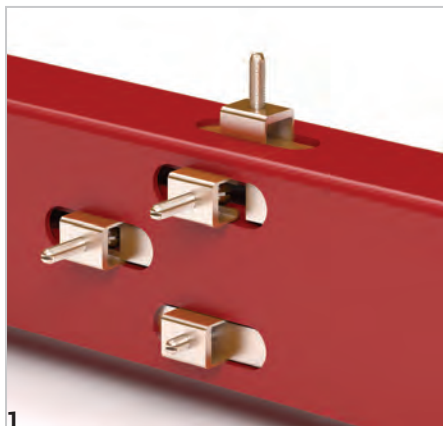

1
Put the conductors through the clips and screw them.

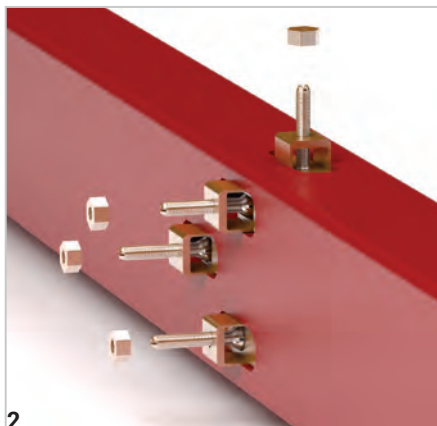


2
Connect the feeding cables to the clips with nuts.

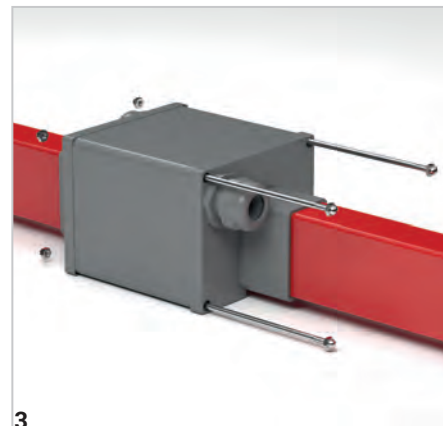


3
Close the module cover and screw it.


TB - End Closure

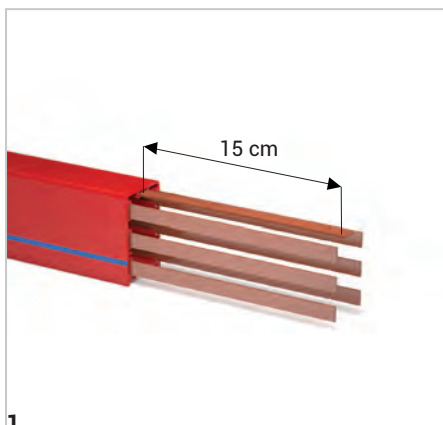

1
Cut the coppers at the end of the line by leaving a extra length of 15 cm.

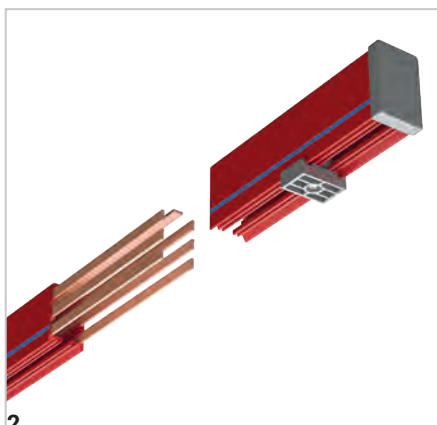


2
After placing the current collector to the system, place the End Closure so that it shall house the coppers.

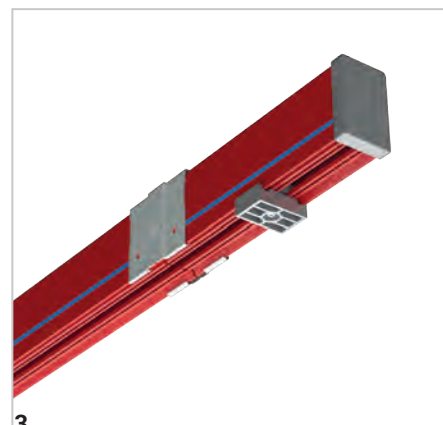


3
Install it on the system as you do while installing the extension.


TB - Conductor Mounting Tool

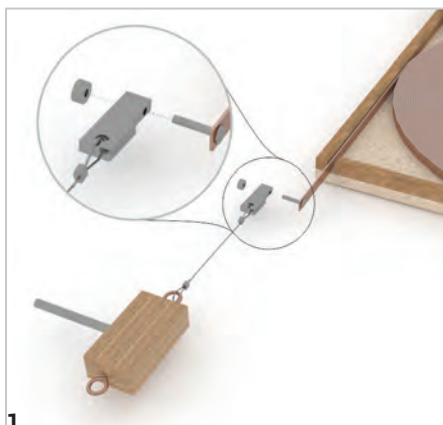

1
Screw the conductor to the conductor mounting tool.

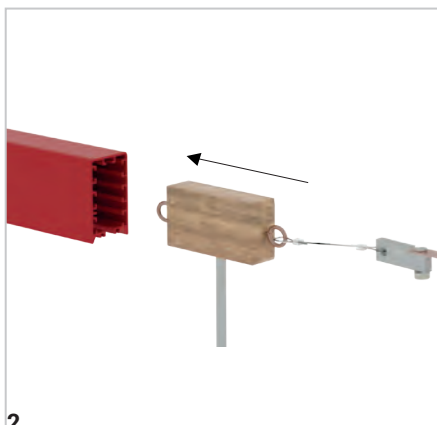

2
Drive the conductor mounting tool along the line.

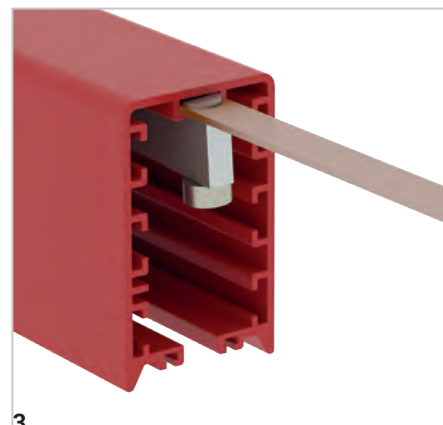

3
Ensure that the conductor is seated.



A large rectangular area filled with a light gray dashed grid pattern, intended for technical drawing or notes.

E-LINE TB

Offer Request Form



Date :

Project Name	:	<input type="text"/>
Company	:	<input type="text"/>
Name Surname	:	<input type="text"/>
Tel	:	<input type="text"/>
E-Mail	:	<input type="text"/>
Address	:	<input type="text"/>

General Data

Track Length	:	<input type="text"/>
Number of Cranes on Track	:	<input type="text"/>
Crane Travel Speed	:	<input type="text"/>

Environmental Data

Operating Environment	:	<input type="checkbox"/> Indoor	<input type="checkbox"/> Outdoor
Ambient Temperature	:	<input type="text"/> °C min.	<input type="text"/> °C max.
Other Operating Conditions (Humidity, Dust, Chemical Influence, etc.)	:	<input type="text"/>	

Electrical Data

Operating Voltage	:	<input type="text"/> Volts	<input type="checkbox"/> AC	<input type="checkbox"/> DC			
	:	<input type="text"/> Phases	<input type="checkbox"/> N	<input type="checkbox"/> PE			
Position and Number of Feeder	:	<input type="text"/> from End	<input type="text"/> from Middle				
Duty Cycle (%)	:	<input type="checkbox"/> 50%	<input type="checkbox"/> 60%	<input type="checkbox"/> 70%	<input type="checkbox"/> 80%	<input type="checkbox"/> 90%	<input type="checkbox"/> 100%

Motor Specifications	Crane - 1		Crane - 2		Crane - 3	
	Power (kW)	Current (A)	Power (kW)	Current (A)	Power (kW)	Current (A)
Hoist motors	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
Auxiliary motor	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
Long travel	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
Cross travel	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

Options

Brackets Required	:	<input type="checkbox"/> Yes	<input type="checkbox"/> No
Repair Zone Required	:	<input type="checkbox"/> Yes	<input type="checkbox"/> No
Collector Replacement Required	:	<input type="checkbox"/> Yes	<input type="checkbox"/> No
Descriptions	:	<input type="text"/>	


Please duplicate this page for your own use.

SUSTAINABLE FUTURE


Sustainability Management at EAE Elektrik




As part of our goal to support sustainable development and green transformation, measuring, evaluating, and managing all economic, environmental, and social impacts resulting from our sustainability practices is a key governance priority for EAE Elektrik. We act with great care in analyzing, monitoring, and managing the economic, environmental, and social impacts and risks that arise throughout our value chain in both our national and global operations.




Busbar
Systems

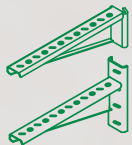

Support
Systems



Cable Tray
Systems

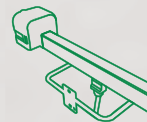

Trolley Busbar
Systems



Fit-Out
Solutions

"We are working together with all our stakeholders to develop the electrical technologies that will build the future."

You can visit our sustainability website at
surdurulebilirlik.eae.com.tr



EAE Elektrik
Head Office

Akcaburgaz Mahallesi,
3114. Sokak, No: 10 34522
Esenyurt - Istanbul - Türkiye
Tel: +90 (212) 866 20 00
Fax: +90 (212) 886 24 20

EAE DL 4 Factory
Busbar 2

Gebze IV Istanbul Makine ve Sanayicileri
Organize Bolgesi, 6.Cadde,
No:14/10 41455 Demirciler Koyu,
Dilovasi - Kocaeli - Türkiye
Tel: +90 (262) 999 05 55
Fax: +90 (262) 502 01 45



Please visit our website for the updated
version of our catalogues.
www.eaeelectric.com



Catalogue 08 - En. / Rev. 14 0 Pcs. 04/09/2025
E.U.

EAE has full right to make any revisions or changes on this catalogue without any prior notice.